

GUARANTEES PROVIDED FOR THE DEVICE

- 1) The device is manufactured under strict quality control and subsequent inspection.
- 2) If the malfunction occurred with proper use of the device, the consumer can use the free warranty service by contacting the store where the device was purchased or our repair center with the warranty card.
- 3) Refusal of free warranty service will be in the following situations:
 - Damage due to repair or traces of opening the device without our knowledge.
 - Damage caused by improper or negligent use or accidents.
 - Damage caused by natural disasters or power surges.
 - Damage caused by ignoring the warnings described in the product specification.
- 4) The product warranty is provided only if there is a warranty card and a purchase receipt.

WARRANTY CARD

Name	Hair dryer	Warranty period
Model		One year from the date of purchase
Date of purchase	D.M.Y.	Valid until:


Buyer	Address		FN/LN	
			Phone number	
Point of sale	Address		Seller's name	
	Title		tel. number of the point of sale	



INARI

KANI

PROFESSIONAL HAIR DRYER

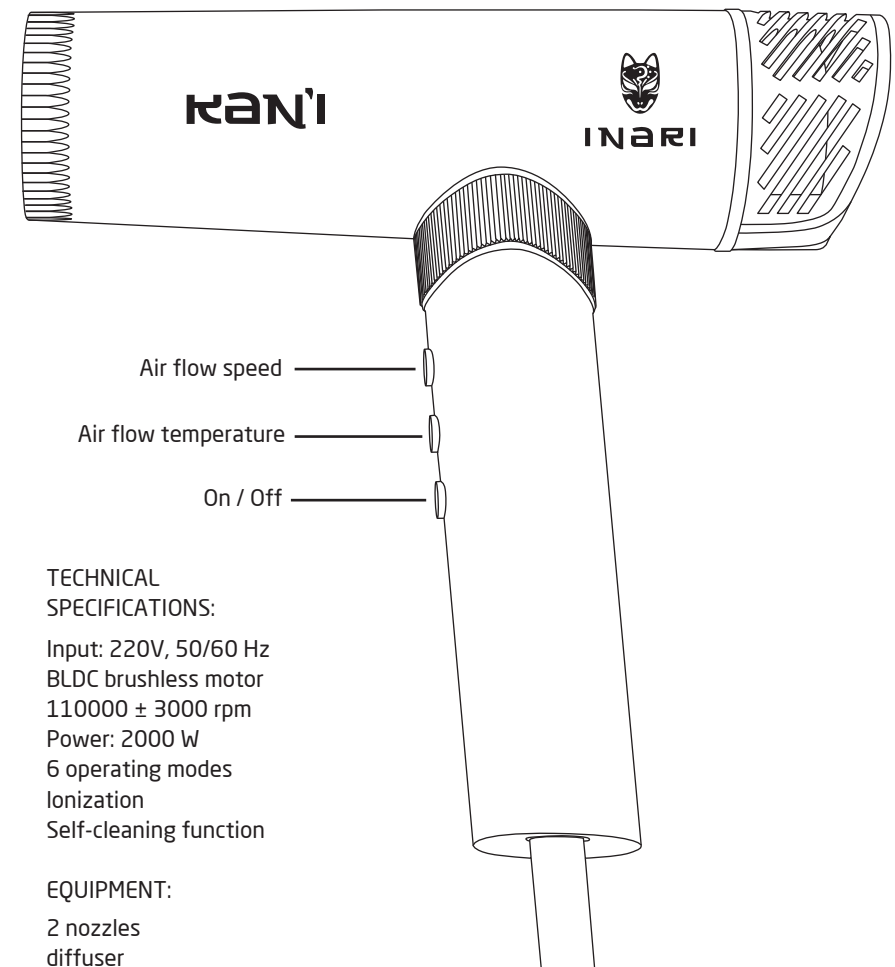

TECHNICAL SPECIFICATIONS:

Input: 220V, 50/60 Hz
 BLDC brushless motor
 110000 ± 3000 rpm
 Power: 2000 W
 6 operating modes
 Ionization
 Self-cleaning function

EQUIPMENT:

2 nozzles
 diffuser

IMPORTANT INFORMATION

- Do not wrap the wire around the hair dryer.
- The hair dryer can be operated from the mains at a voltage of 220/240 volts.
- Do not place the hair dryer on the heating devices.
- Never immerse the hair dryer in water. Never use it while taking a bath or shower.
- Do not leave the hair dryer running on a wet surface.
- Do not cover the air inlet and outlet openings while the hair dryer is running.
- If the hair dryer is not in use, it must be disconnected from the mains.
- Do not pull the wire.
- Do not turn on the hair dryer without the rear filter on.
- Do not use a hair dryer if it has a damaged wire, or it has other signs and damage.
- Unplug the device from the wall outlet:
 - if it does not work properly;
 - before cleaning;
 - after use.

Usage

- Insert the power plug, and turn on the button "On / Off"
- Set the hair dryer to the drying mode by choosing the needed speed and temperature of the air flow.
- Use the hair dryer.
- After use, turn off the hair dryer with the button "On / Off", then remove the power plug.

Self-cleaning function

Press and hold the "Air flow speed" button for 5-10 seconds without turning on the hair dryer, after which the self-cleaning function of the hair dryer will start and air will begin to flow from behind. After 10 seconds, the air flow will turn off and hair dryer will end the self-cleaning process.

The hair dryer must be used in accordance with the provision of the specification. It is necessary to use a hair dryer away from water. After use, it is required to remove the plug from the outlet.

The hair dryer must be stored in a dry room. As a result of moisture ingress, the service life of the hair dryer is shortened and the risk of damage to the electrical insulation increases. Do not continue working if the hair dryer has been running for more than 30 minutes without stopping. It is required to wait until the hair dryer cools down. Do not plug the hair dryer into the outlet if it is overheated to prevent internal overheating due to insufficient heat resistance caused by prolonged operation.



WARNING



During maintenance, the power cord must be removed from the outlet, otherwise there is a risk of electric shock.



You need to use a standard electrical outlet. Do not use the rated voltage of the power supply, except when using, otherwise there is a risk of electric shock, fire.



Do not plug the plug into the outlet with wet hands, otherwise there is a risk of electric shock.



Do not use in the bathroom, otherwise there is a risk of electric shock.



Do not store the hair dryer in the bathroom or other damp room, otherwise there is a risk of electric shock.



Do not use the hair dryer near flammable and flammable objects. Make sure that the power cord does not rub against sharp corners, avoid twisting, bending. Do not place heavy objects on the power cord. If the wire or plug is damaged, do not use a hair dryer to avoid electric shock damage.