

IMPORTANT SAFETY PRECAUTIONS

Basic safety precautions should be followed when using electrical appliances, especially when there are children.

In order to avoid electric shock follow the following rules:

- Before cleaning the electrical appliance, unplug it from the mains.
- Do not use the electrical appliance in a bath or shower. Do not drop it into water or other liquids.

Do not touch an electrical appliance that has fallen into the water! Unplug it immediately.

In order to prevent a burn, fire, or injury:

- Use this appliance only for the purposes described in this operations manual. Do not use devices that are not recommended by the manufacturer.
- Never leave this electrical appliance plugged in unattended.
- When an electrical appliance is used by children or persons with disabilities, it must be carefully supervised.
- Never operate the electrical appliance if the cord or plug is damaged.
- Keep the cord away from hot surfaces. Do not pull or bend the cord. Do not wrap it around the electrical appliance.
- Do not drop the electrical appliance. Do not insert foreign objects into its holes.

Warranty obligations:

1. The manufacturer guarantees the operation of the product under the conditions of transportation, storage, and operation.
2. The warranty covers all damage to the product probably caused by a manufacturing defect.
3. The warranty does not cover mechanical damage to the product.
4. The warranty period of the product is 12 months from the date of sale.

The warranty does not cover the following products:

- Products, if malfunctions in them have arisen as a result of the violation of the rules of operation and transportation.
- Damage caused by overuse, improper handling, improper storage or maintenance, and improper blade removal.
- Components worn out during operation and having a limited service life (POWER CORDS, brushes, plastic leashes, etc.)
- Damage caused by getting foreign objects, substances, and insects in.
- Self-repair of the product or repair carried out in non-specialized workshops.

The consumer loses the warranty service rights in the following cases:

- at the expiration of the warranty period;
- in the presence of mechanical damage to the outer parts of the product;
- in case of violation of the rules of operation.

Cleaning and lubrication of products and sharpening of blades after any period of operation are not included in the cost of warranty service.

You must show the documents certifying the purchase of this product, this product manual with the signature of the seller, and the stamp of the trading organization to get the warranty repair.

« _____ » _____ 20__ year

« _____ » _____ 20__ year

Seller Signature

Seller Signature

Place for stamp


Place for stamp

Curling iron for hair INARI IHT03 OSORI

Note: please, read this operations manual before using the hair straightener.

Warning: do not use a hair straightener in a bathroom, shower, or high-humidity areas.

SCHEME AND DESCRIPTION OF THE CURLING IRON FOR HAIR

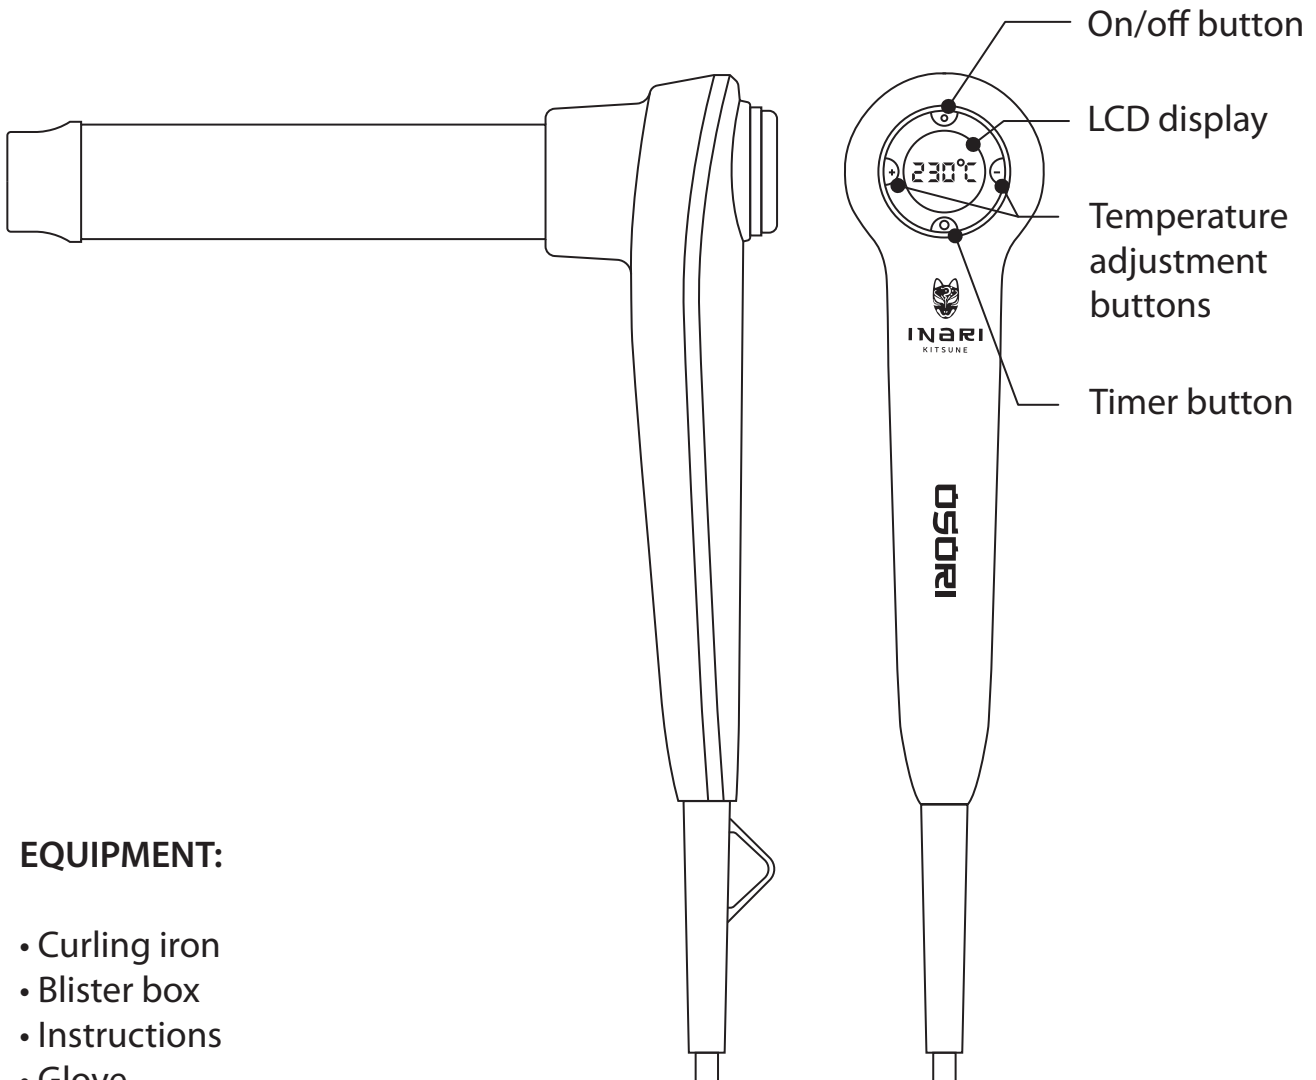

TECHNICAL SPECIFICATIONS:

- Canvas: diameter 25 mm, length 15 mm
- Canvas coating: titanium-tourmaline
- Heating temperature: 130 – 230 °C, 5 °C adjustment
- Power: 45 – 60W
- Cord length: 2.8m, rotates 360°
- Weight: 590 grams

OPERATIONS MANUAL

Before connecting the tool to the network, make sure that its technical data correspond to the characteristics of the network.

Switching on: place the curling iron on a flat, flat and heat-insensitive surface, connect the cord to the power source. Turn on the device by pressing the power button, hold it for a few seconds. The appliance will start to heat up. Press the switch button to select the desired temperature. The device is equipped with buttons to turn on/off and to increase the heating temperature of the plates – from a minimum of 130 °C to a maximum of 240 °C, in increments of 5 ° C.

The plate heating temperature readings are reflected on the display.

The timer (0 – 20 min) is an optional function. To activate, press and hold the timer button for a couple of seconds. To increase the time, press the '+' button, to decrease the time, press the '-' button.

The hair should be dry and well combed. Separate the strand of hair you want to process and place it between the heated plates. To avoid burns, do not touch the heated surface.

After the operation is finished, turn off the device by pressing the power button.

Carefully remove the plug from the outlet. The device cools down gradually. Do not store the appliance that has not cooled down.

Do not use the device on hair that has been varnished or mousse for styling, because strands may stick to the plates, which will make it difficult to get the desired effect and may spoil the tool.

Care of the device

Clean the appliance regularly:

- Disconnect the appliance from the mains and allow it to cool down.
- Wipe the appliance with a soft (if necessary, slightly moistened) cloth or sponge.
- Do not use solid detergents, solvents or abrasives.
- Make sure that the appliance remains dry after cleaning.

Safety precautions:

- Use the appliance for its intended purpose.
- Do not touch the heating element with your hands while heating the device to avoid burns.
- Do not leave the appliance unattended when it is switched on.
- Turn off the power after use.
- Check the condition of the electric cord regularly. Do not use the appliance if the mains plug, power cord or the appliance itself is damaged.
- Avoid getting water into the appliance. Do not use it near the bathroom, sink and any containers filled with water.
- Do not hold onto the appliance with wet hands.
- Do not allow children and people with physical and mental disabilities to use the appliance without your supervision.

ATTENTION!

The temperature controller provides a wide range of heating temperatures, allowing the plates to be heated to a temperature appropriate to the structure and type of hair to be modeled. To select the temperature, use the table:

Temperature °C	Hair type
130 – 150°C	Dyed, thin hair
150 – 170°C	Normal hair type
170 – 200°C	Thick unruly hair
200 – 230°C	Coarse hair

ATTENTION! Do not rinse the device under running water or immerse it in the water

Fault	Possible reason	Fault recovery
The device does not turn on	The device is not connected to the power grid	Plug into the power outlet
	The operating mode of the device does not correspond to the working one	Use the temperature controller to set the required heating temperature for the plates.
	The power cord or plug is damaged	
A foreign smell appeared during the operation of the device	Some parts of the device have been coated with a protective covering that may have a foreign smell. This is not a fault.	Turn off the appliance, and wait until it cools down. Wipe the plates with a wet material. Repeat the procedure if necessary.